



# Care and Maintenance

For Schock sinks

# Contents

<b>Overview</b>	<b>3</b>
<b>Cleaning products</b>	<b>4</b>
<b>Do not use</b>	<b>5</b>
<b>Product icons</b>	<b>6</b>
<b>Daily wash</b>	<b>8</b>
<b>How to use Limescale remover on coloured sinks</b>	<b>10</b>
<b>Intensive wash for stains on coloured sinks</b>	<b>12</b>
<b>Removing pot marks</b>	<b>16</b>
<b>Intensive wash for stains on white sinks</b>	<b>18</b>



Daily wash **8**



Intensive wash **12**



Limescale remover **10**



Removing pot marks **16**

# Cleaning products



## **EcoGranit® large cleaning kit**

Code: 9677 EC

- ✓ 250ml Easy care balsam
- ✓ 250ml Easy care Limescale remover
- ✓ 3 x Eraser sponges



## **EcoGranit® small cleaning kit**

Code: 9727 EC

- ✓ 50ml Easy care balsam
- ✓ 2 x Easy care active tabs
- ✓ 1 x Eraser sponge



## **EcoGranit® Brightener**

Code: 9725 WH

- ✓ 250ml Easy care brightener
- ✓ Use on white EcoGranit® sinks



## **EcoGranit® cleaning sponges**

Code: 9728 WH


- ✓ 3 Pack eraser sponges

Products available to buy on line - [heritagehardware.co.nz](https://heritagehardware.co.nz)




## Do not use


- ✗ Abrasive cleaning creams or powders
- ✗ Abrasive cleaning pads
- ✗ Concentrated caustic soda or formic acid
- ✗ Anything highly corrosive
- ✗ Jif
- ✗ Placing hot pots onto the surface from the stove or oven may cause thermal shock, discolouration or damage, so always use a hot mat.

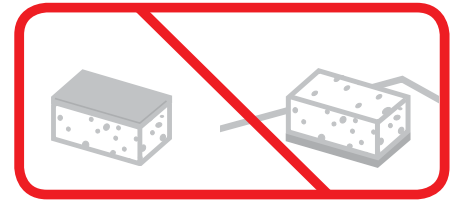

## Product icons

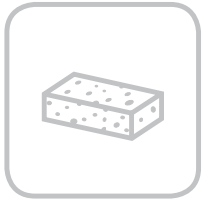 


**Eraser sponge**

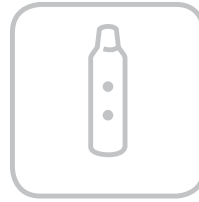 


**Easy care Limescale  
remover**



**Easy care balsam**

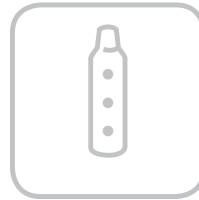 

**Easy care brightener**

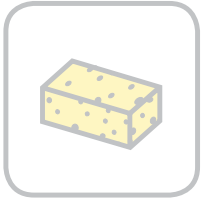 


**Dish washing sponge**



**Ordinary cleaning cloth**



 **Washing-up liquid**

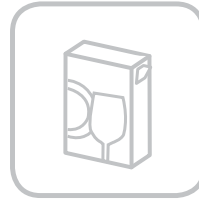


**Dishwasher powder**



Daily wash


8

 1

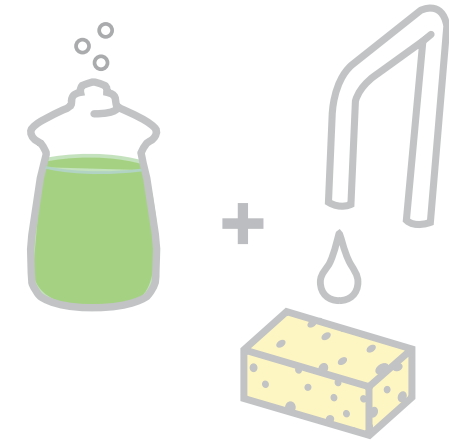


Use washing-up liquid, dish washing sponge or eraser sponge and clean water.

2

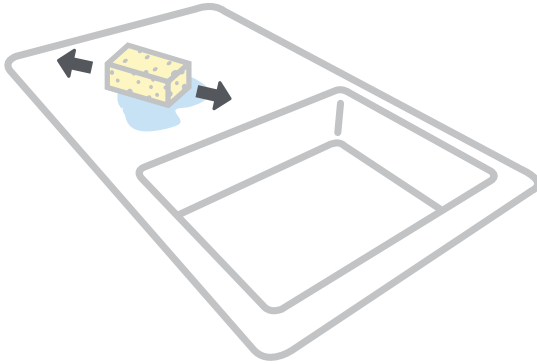

Thoroughly wash the sink surface.

3

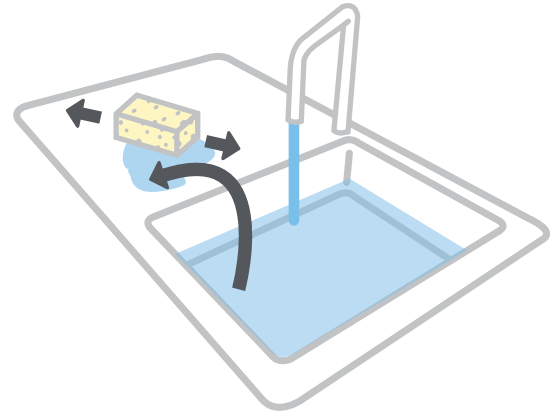

Rinse off with dish washing sponge and clean water.



## How to use Limescale remover

10

### What is Limescale?

If you live in a hard water area then there's every chance you are all too familiar with limescale. What is Limescale?

Limescale is the deposits left behind by hard water.

Limescale is the chalky off-white crust that lurks inside your kettle and boiler and stains your surfaces.


Scientifically speaking limescale is a deposit of calcium carbonate and a residue left behind by hard water.

Hard water is water that contains a higher concentration of dissolved minerals like calcium and magnesium.

When the water evaporates, it leaves behind calcium carbonate deposits.

These limescale deposits therefore build up on any surfaces that hard water is in contact with and can accumulate quickly.

1

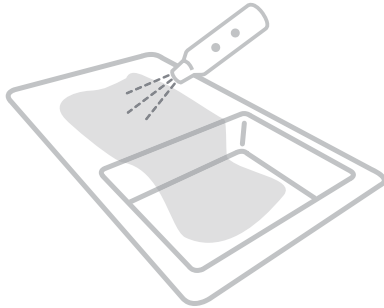

Apply easy care Limescale remover.


2



00:10:00

Leave for 10 minutes.

3

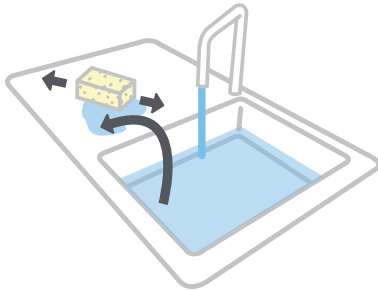

Rinse off with dish washing sponge and clean water.



Video - How to use Limescale cleaner on Schöck sinks. [archant.co.nz/resources/videos](https://archant.co.nz/resources/videos)






## Intensive wash for stains on coloured sinks

 
12

1

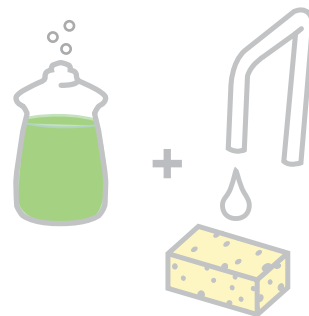


Use washing-up liquid, dish washing sponge or eraser sponge and clean water.

2

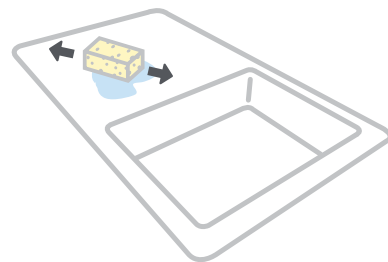


Thoroughly wash the sink surface.

3

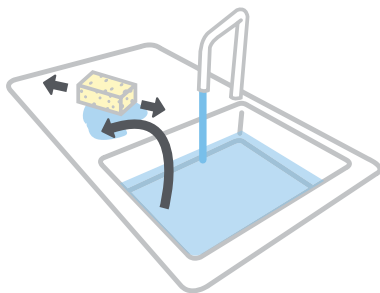

Rinse off with dish washing sponge and clean water.

4

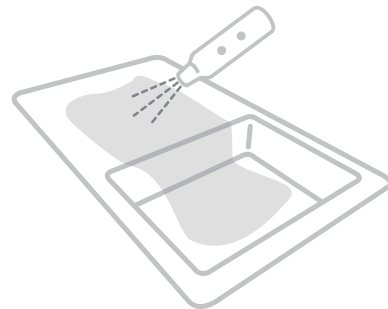

Apply easy care Limescale remover.


5



00:10:00


Leave for 10 minutes.

6

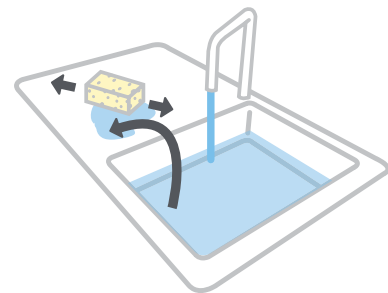


Rinse off with dish washing sponge and clean water.

7

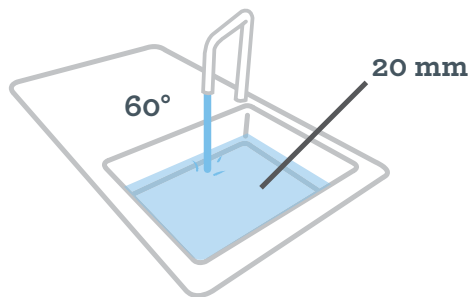

Insert plug and fill sink with 60° hot water to about 20 mm from bottom of the sink.

8

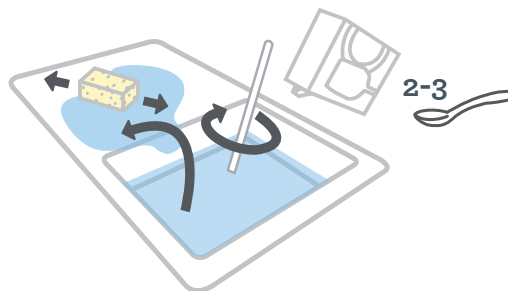

Stir in 2-3 teaspoons of dish washing powder and thoroughly wash the sink surface.


9



01:30:00


Leave for 1 & half hours.

10

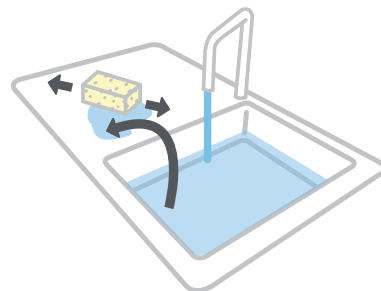


Rinse off with dish washing sponge and clean water.

11

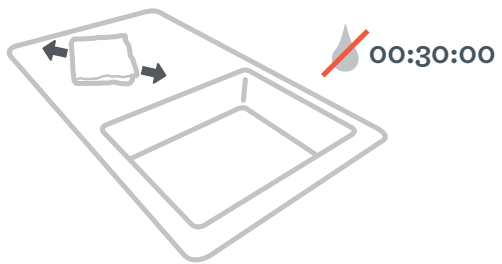

Completely dry off with an ordinary cleaning cloth and leave for 30 minutes before using the sink again for best results.

12

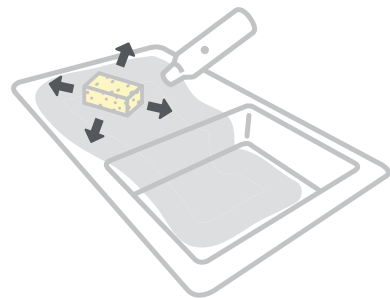


Apply easy care balsam to the sink surface ensuring all areas gets covered.

13



Leave for 1 minute.

14

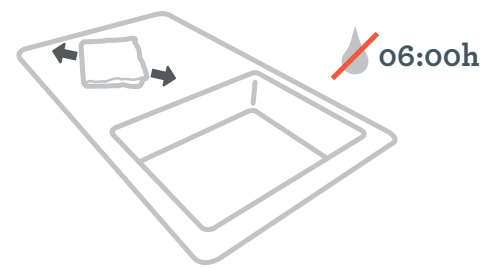

Completely dry off with an ordinary cleaning cloth and leave for 6 hours before using the sink again for best results.



## Removing pot marks

16

1




Use eraser sponge and clean water.




View video online - How to use white sponge on Schock sinks. [archant.co.nz/resources/videos](https://archant.co.nz/resources/videos)

2

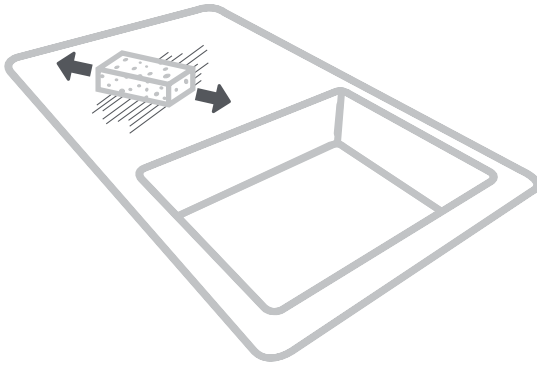

Thoroughly wash the sink surface.

3

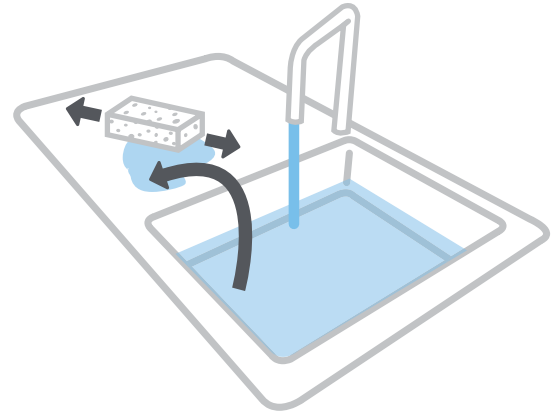


Rinse off with eraser sponge and clean water.



## Intensive wash for stains on white sinks


18

1

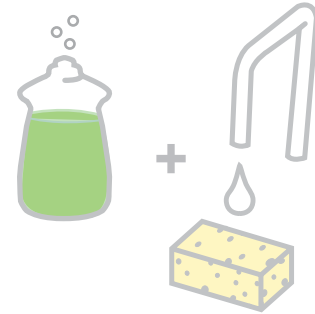

Use washing-up liquid, dish washing sponge or eraser sponge and clean water.


2

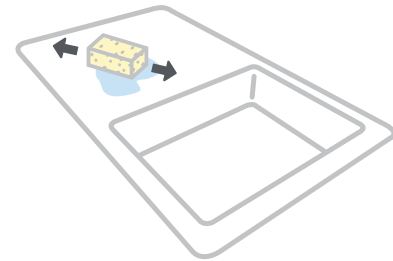

Thoroughly wash the sink surface.




3

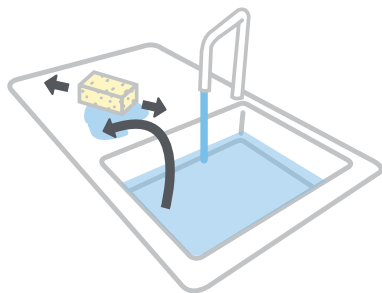

Rinse off with dish washing sponge and clean water.

4

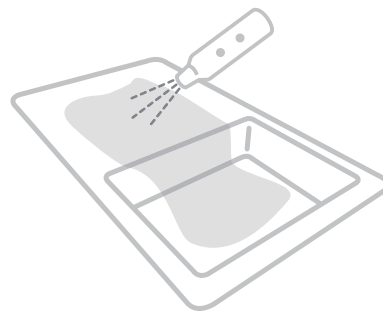

Apply easy care Limescale remover.


5



00:10:00


Leave for 10 minutes.

6

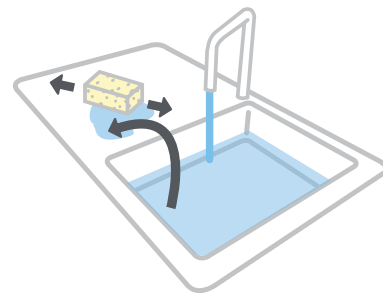


Rinse off with dish washing sponge and clean water.

7

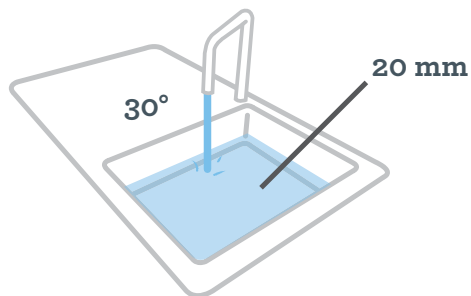

Insert plug and fill sink with 30° hot water to about 20 mm from bottom of the sink.

8

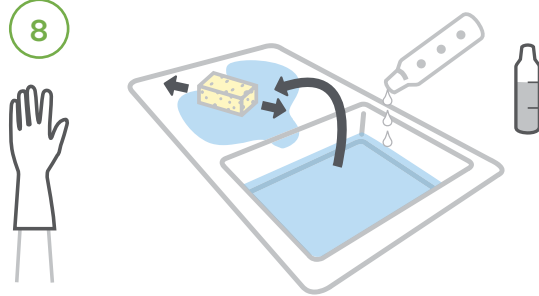

Wear gloves, Stir in 30ml of easy care brightener and thoroughly wash the sink surface.


9



00:15:00


Leave for 15 minutes.

10

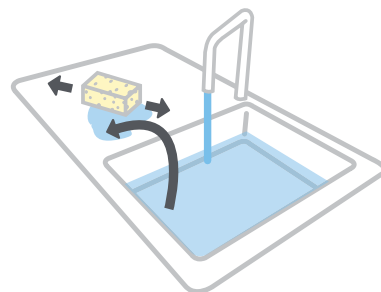


Rinse off with dish washing sponge and clean water.

11

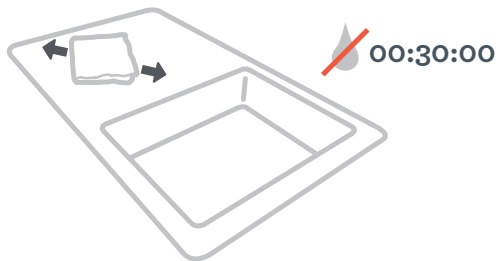

Completely dry off with an ordinary cleaning cloth and leave for 30 minutes before using the sink again for best results.

12

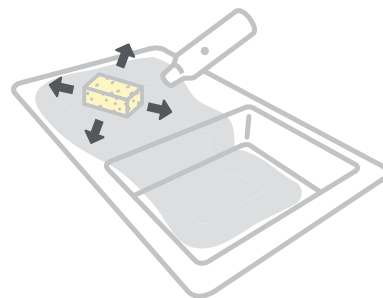


Apply easy care balsam to the sink surface ensuring all areas gets covered.

13



Leave for 1 minute.

14

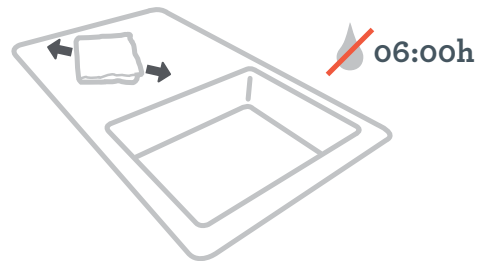

Completely dry off with an ordinary cleaning cloth and leave for 6 hours before using the sink again for best results.

**SCHOCK**

HANDMADE IN GERMANY



# SCHOCK

HANDMADE IN GERMANY



[archant.co.nz](http://archant.co.nz)

0800 ARCHANT (0800 272 4268)

\*All rights reserved E&OE 2019